


Strikes

10-055, 10-081, 10-094

Jamb Type: Wood
Style: Square Corner, Deadbolt
Standard for: B600/700/800-Series | B280-Series | B/BA300-Series | BC100-Series | BE-Series | BR260-Series
Optional for:

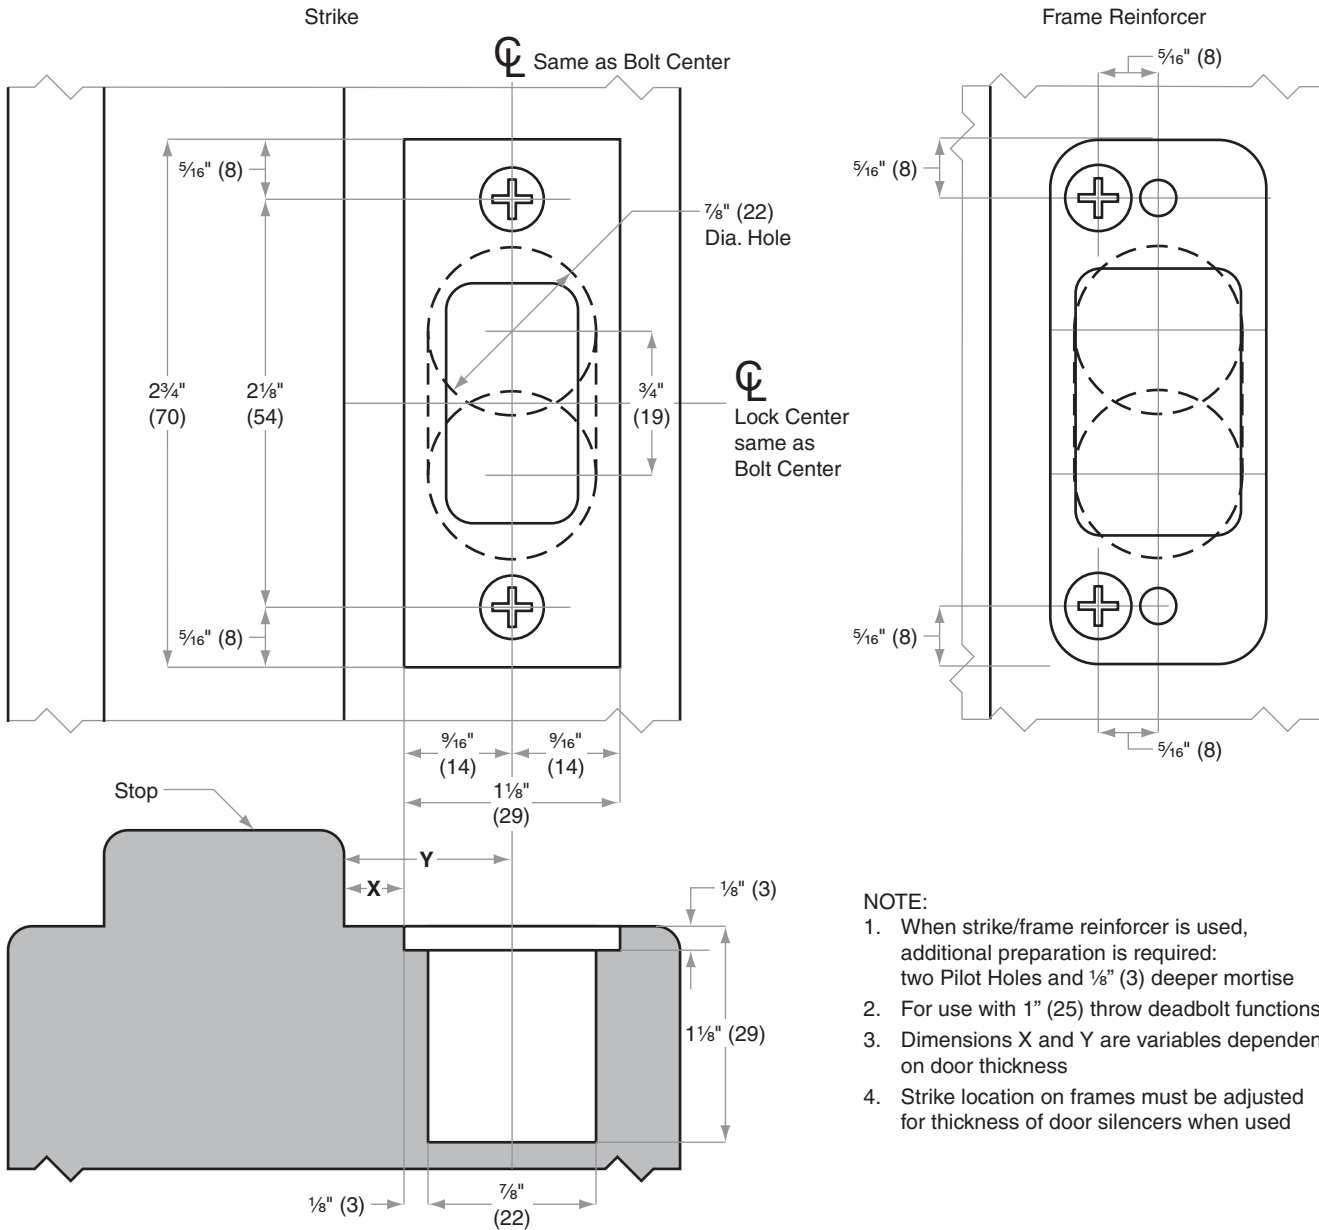

- NOTE:**
1. When strike/frame reinforcer is used, additional preparation is required: two Pilot Holes and $\frac{1}{8}$ " (3) deeper mortise
 2. For use with 1" (25) throw deadbolt functions
 3. Dimensions X and Y are variables dependent on door thickness
 4. Strike location on frames must be adjusted for thickness of door silencers when used

Dimensions shown in parentheses () are in millimeters

Job: _____
Date: _____
Door Thickness: _____
Remarks: _____

**TEMPLATE
J884**