


# Strikes, Combination

10-255=10-055x10-027

**Jamb Type:** Metal  
**Style:** Combination  
**Standard for:**  
**Optional for:** H-Series | S200-Series

**NOTE:**

1. Dimensions X and Y are variables dependent on door thickness
2. Distance from upper strike to lower strike same as latch and bolt
3. Curved strike extension beyond jamb at Z must not be less than 3/16" (5) to ensure proper functioning of latch bolt

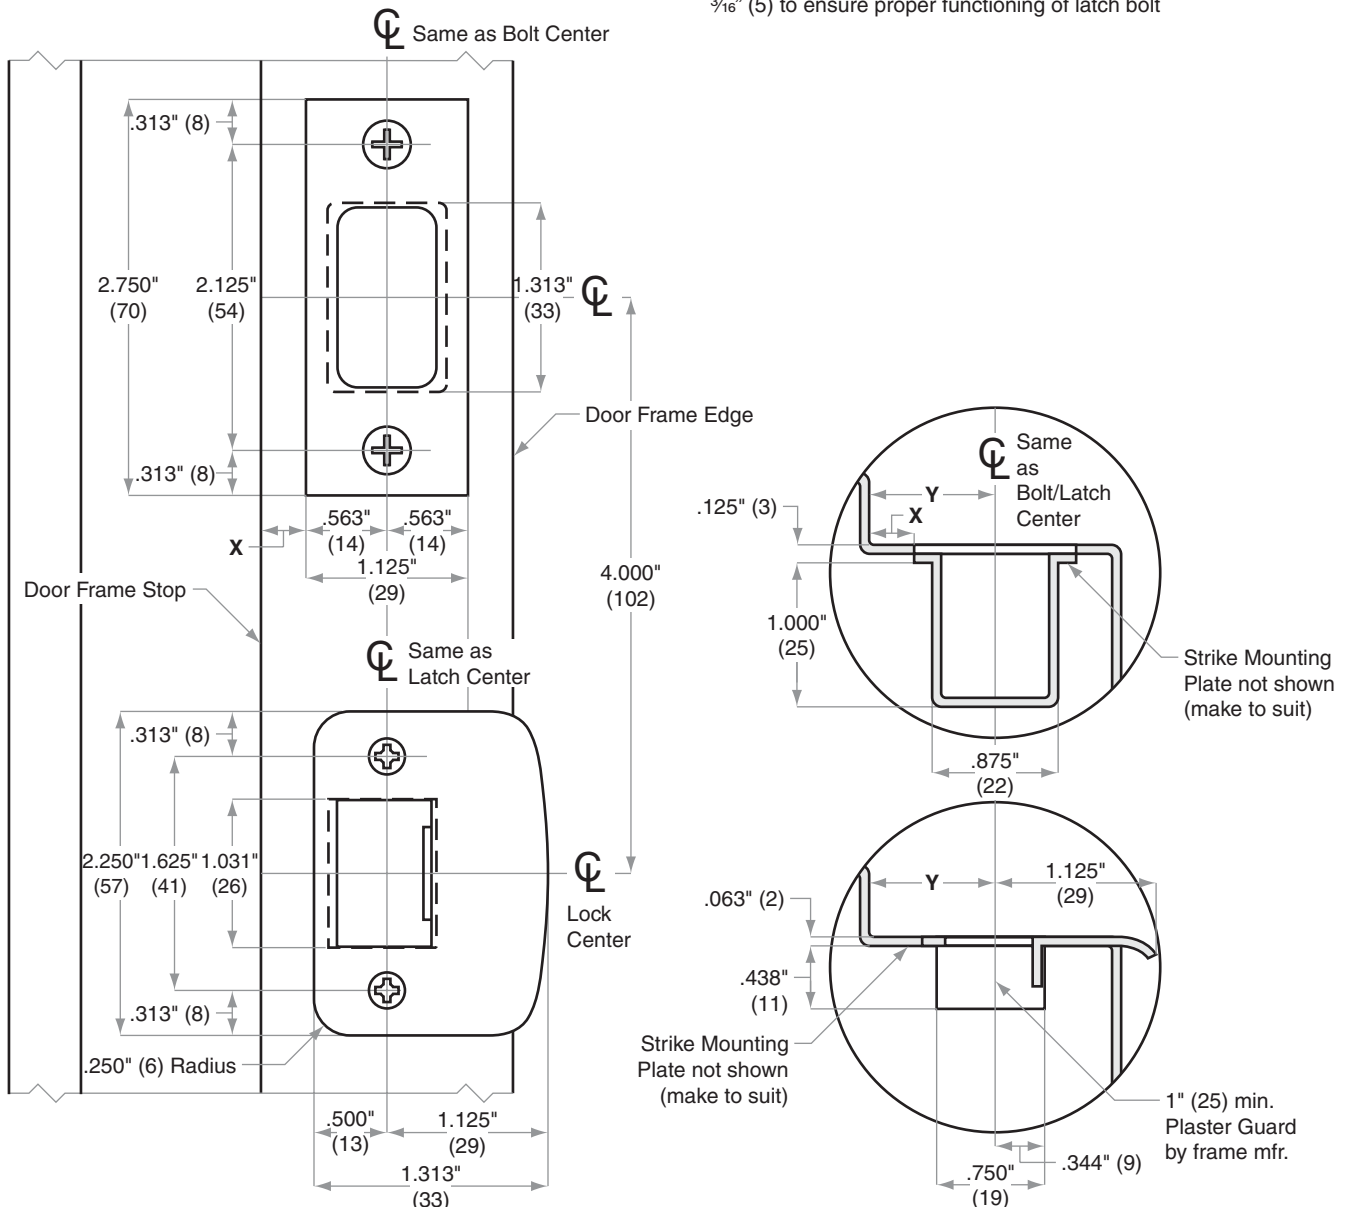

Dimensions shown in parentheses ( ) are in millimeters

**Job:** \_\_\_\_\_

**Date:** \_\_\_\_\_

**Door Thickness:** \_\_\_\_\_

**Remarks:** \_\_\_\_\_

**TEMPLATE  
J917**